
RAM® PORTABLE VEHICLE DESK

INSTRUCTION SHEET

PLEASE READ THE FOLLOWING BEFORE USING THIS PRODUCT

- DON'T USE THIS PRODUCT WHILE DRIVING
 DON'T OVER TIGHTEN THE STRAP OR THE PRODUCT MAY
 BE DAMAGED.
- 3. INSPECT THE STRAP REGULARLY FOR WEAR
- 4. KEEP THE ANGLE OF THE TABLE SURFACE THE SAME ON BOTH SIDES BY ADJUSTING THE BALL KNOBS
- 5. DAMAGE COULD OCCUR TO DESK IF SUBJECTED TO SHOCK OR VIBRATION LOADS.
- 6. INJURY TO END USER COULD OCCUR IF THIS PRODUCT IS NOT USED PER THE INSTRUCTION SHEET.
- 7. KEEP LOADS IN THE CENTER OF DESK SURFACE FOR BEST BALANCE AND TO PROVIDE MOST STABLE SURFACE.
 8. DON'T OVERLOAD DESK, MAX LOAD IS 10 LBS.
- 9. AS SHOWN BELOW, DON'T USE THIS PRODUCT WITH ANY SINGLE SUPPORTING HEAD REST OR IF THERE IS ANYTHING SHARP IN THE BACK OF THE SEATTHAT IT RESTSAGAINST.

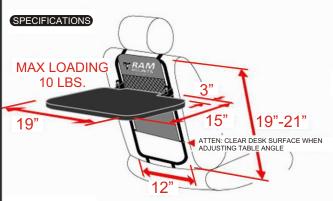



DISTRIBUTED EXCLUSIVELY THROUGH: NATIONAL PRODUCTS INC. 1205 S. ORR ST., SEATTLE, WA 98108 WWW.RAM-MOUNT.COM

MATERIAL LIST:
PIPE: IRON/PAINTED
PLASTIC: ABS
HARDWARE: STEEL/PAINTED
FABRIC: NYLON




INSTRUCTIONS FOR REAR SEAT



LOOP UPPER STRAP AROUND HEAD REST. PUSH THE SEAT BUTTON THROUGH THE GAP BETWEEN THE SEAT BACKAND BOTTOM INTO THE FRONT AS SHOWN.



PULL UPPER STRAP TO TIGHTEN AND RAISE THE DESK FOR THE BEST HEIGHT, THEN TIGHTEN LOWER STRAP TO SECURE

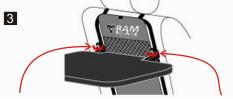

ADJUST DESK ANGLE USING BALL KNOBS ON EACH SIDE TILL DESK SURFACE IS AT DESIRED ANGLE.



PLACE AND ADJUST TOP STRAP AROUND THE HEAD REST, DON'T USE THE BOTTOM STRAP. FOLLOW ITEM #3 TO ADJUST DESK SURFACE