

Item Number
RAM-VB-121

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
CHRYSLER TOWN & COUNTRY (1996-2004)
PLYMOUTH VOYAGER (1996-2001)
DODGE CARAVAN (1996-2007)

SPECIFICATIONS

Placement

Drivers side on inner front and back seat studs

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket/Bench

Pole or Pedestal

Included on base

Construction/Finish

Steel/Black Powdercoat

Weight

10.5 lbs.

Dimensions


A = 17.8", B = 5.5", C = 11.25"



Shown In Use

Features

Installs in minutes with no drilling required

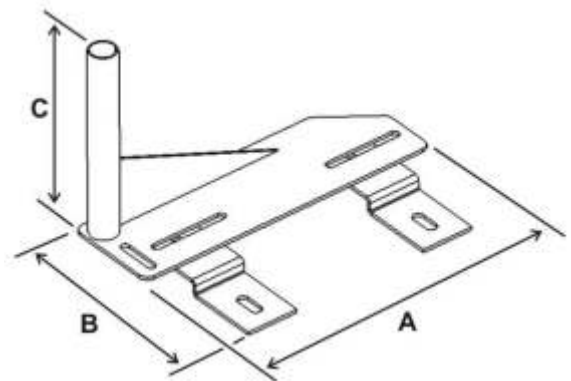

RAM-VB-121

Misc.

Rugged Steel Construction

Lifetime warranty

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-121

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
CHRYSLER TOWN & COUNTRY (1996-2004)
PLYMOUTH VOYAGER (1996-2001)
DODGE CARAVAN (1996-2007)

INSTALLATION INSTRUCTIONS

1. Remove the seat bolts that hold the right side of the driver's seat to the floor.
2. Loosely assemble legs to the base. Do not firmly tighten.
3. Place mounting base to the right side of the driver's seat. Align mounting legs to the seat bolt holes and tighten in place.
4. Gently lift the inside of the seat upward to allow the seat frame to clear the studs.
5. Place the base between the seat frame and align the holes in the base with the seat studs.
6. Lower the seat back down over the No-Drill™ base and seat studs.
7. Fully tighten factory hardware to secure base in place along with seat frame.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

