

**Item Number**  
RAM-VB-142

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the  
JEEP GRAND CHEROKEE (2005-2010)  
JEEP COMMANDER (2006-2010)**

## SPECIFICATIONS

### Placement

Passenger side, front, where seat rail frame attaches to floor board.

### Drilling Required

No - uses existing seat bolts

### Seat Configuration

Bucket

### Construction/Finish

Steel/Black Powdercoat

### Dimensions

A = 18.5", B = 5.625", C = 3.25"  
Hole Centers = 16.562"

### Pole or Pedestal

Sold Separately

### Weight

4.5 lbs.

## Features


Installs in minutes with no drilling required  
Low profile keeps mount away from passenger leg space

## Misc.

Rock solid construction  
Lifetime warranty



Shown In Use

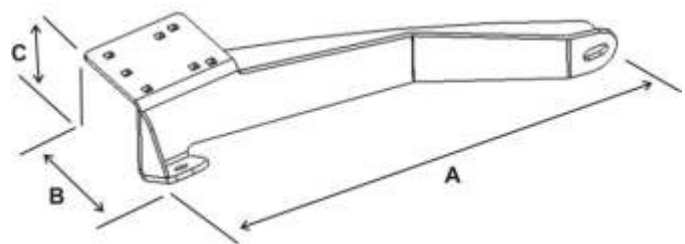

RAM-VB-142

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-142

**RAM No-Drill™ Seat Bases**  
National Products, Inc.

**Vehicle base for the**  
**JEEP GRAND CHEROKEE (2005-2010)**  
**JEEP COMMANDER (2006-2010)**

## **INSTALLATION INSTRUCTIONS**

### **Jeep Commander Instructions:**

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts. Store these bolts.
2. Place the supplied stand offs over the holes in the seat frame legs and rest the no drill base on top of these.
3. Align the holes in the base, stand offs, and seat frame legs with those in the floor board. The pedestal platform should be near the console.
4. Pass the supplied longer bolts through to the holes in the floor board and start the thread by hand.
5. Using a socket wrench, fully tighten the bolts to secure the No-Drill™ base into the vehicle.
6. After a week of use, check seat bolts and re-tighten if necessary.

### **Jeep Grand Cherokee Instructions:**

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.

Note that depending on the trim level of your vehicle, there may be a one or more pieces of plastic trim covering the seat frame bolts. These will need to be removed and stored to access the mounting hardware. Also, a supplied stand-off, washer, and longer seat bolt may be used on the passenger door side seat bolt location. While not necessary for every installation, this hardware may be necessary for some installations.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

