Vehicle base for the

Toyota Highlander (2008-Newer)

SPECIFICATIONS

Placement

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions A = 17.125", B = 6.5", C = 5"

Hole Center = 15.875"

Pole or Pedestal Sold Separately

Weight 7.0 lbs.



Shown In Use


Features

Installs in minutes with no drilling required Low profile keeps mount away from passenger leg space

Misc.

Rock solid construction

Lifetime warranty

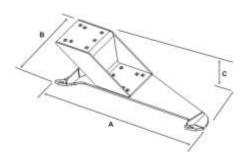

RAM-VB-138ST2

National Products, Inc. Phone: 206-763-8361 Fax: 206-763-9615 Address: 1205 S Orr St Seattle, WA 98108

Website: www.ram-mount.com Email: staff@ram-mount.com



Item Number RAM-VB-138ST2

RAM No-Drill TM Seat Bases National Products, Inc.

Vehicle base for the

Toyota Highlander (2008-Newer)

INSTALLATION INSTRUCTIONS

- 1. Attaching the fixed riser to the No Drill base should be done prior to attaching the base to the vehicle. For a finished look, assemble so the rounded heads of the carriage bolts are on top.
- 2. Move the passenger seat back to its rearmost position and remove the front seat rail bolts using a 14mm socket wrench. Save and store these bolts should the mount be later removed.
- 3. Using the provided hardware, place the washers over the longer bolts, pass the bolts through the No Drill base, next through the round stand-offs, and align over the threaded holes in the floor board.
- 4. Start bolts by hand to insure that the bolts do not cross thread
- 5. Using a 17mm socket wrench, fully tighten the bolts to secure the base.
- 6. After a day of use, re-tighten the seat bolts holding the mount.

National Products, Inc. Phone: 206-763-8361 Fax: 206-763-9615 Address: 1205 S Orr St Seattle, WA 98108

Website: www.ram-mount.com Email: staff@ram-mount.com

