

Item Number
RAM-VB-148

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the FORD FOCUS (2003-NEWER)

SPECIFICATIONS

Placement

Passenger side on the floor, between seat cushion & seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 19.687" B = 7.25" C = 1"
Hole Centers = 17.75"

Pole or Pedestal

Purchased Separately

Weight

4.5 lbs.

Features

Installs in minutes with no drilling required
Minimal interference with passenger leg space

Misc.


Rock solid construction

Lifetime warranty

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

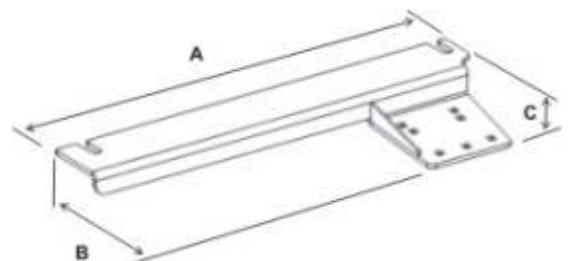

RAM-VB-148



Item Number
RAM-VB-148

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the **FORD FOCUS (2003-NEWER)**

INSTALLATION INSTRUCTIONS

1. Move the seat to its rear most position.
2. Loosen the front bolts that hold the seat cushion to the slides. The bolts only need to be loosened enough to so the mount can be slid between the cushion and the slides.
3. Slide the mount between the cushion and the slides and re-tighten the bolts.

Please Note: If the seat is moved completely forward, the mounted equipment could possibly hit the dash. Once the base is installed, use caution when adjusting the passenger side seat.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

