

**Item Number**  
RAM-VB-152

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
**FORD ESCAPE (2001-NEWER)**  
**MAZDA TRIBUTE (2005-NEWER)**  
**MERCURY MARINER (2005-NEWER)**

## SPECIFICATIONS

### Placement

Passenger side of vehicle, front, where seat frame attaches to floor board.

### Drilling Required

No - uses existing seat bolts

### Seat Configuration

Bucket

### Construction/Finish

Steel/Black Powdercoat

### Pole or Pedestal

Sold Separately

**Weight** 6.1 lbs.

### Dimensions

A = 17.625", B = 8.32", C = 2.5"

Hole Center = 15.625"

## Features

Installs in minutes with no drilling required  
Low profile keeps mount away from passenger leg space

## Misc.


Rock solid construction

Lifetime warranty

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



Shown In Use

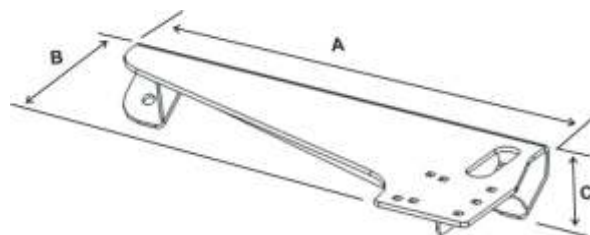

RAM-VB-152



**Item Number**  
RAM-VB-152

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
**FORD ESCAPE (2001-NEWER)**  
**MAZDA TRIBUTE (2005-NEWER)**  
**MERCURY MARINER (2005-NEWER)**

## INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts that hold the seat frame to the floor board.
2. Without moving the seat, place the No-Drill™ base over the front of the seat bracket.
3. While keeping the holes aligned, re-install the seat bolts and tighten.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

