

## Item Number

RAM-VB-155 & RAM-VB-155-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the HONDA CIVIC (2006-2011)

### SPECIFICATIONS

#### Placement

Passenger side on the floor, under front seat

#### Drilling Required

No - uses existing seat bolts

#### Seat Configuration

Bucket

#### Construction/Finish

Steel/Black Powdercoat

#### Pole or Pedestal

Purchased Separately

#### Weight

3.8 lbs.

#### Dimensions

A = 17.25", B = 8.94", C = 1.75"

Hole Center = 15.75"

### Features

Installs in minutes with no drilling required  
Won't interfere with passenger leg space


### Misc.

Rock solid construction  
Lifetime warranty

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



RAM-VB-155-SW1

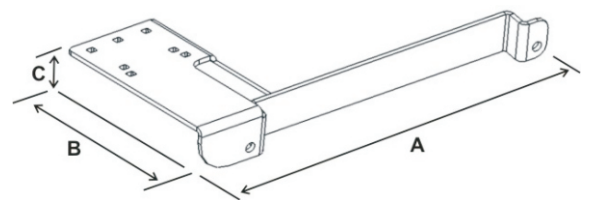

RAM-VB-155



## Item Number \_\_\_\_\_

RAM-VB-155 & RAM-VB-155-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the HONDA CIVIC (2006-2011)

### INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten. It is recommended to start these bolts by hand at first to prevent cross threading.



For some installations, the use of a stabilizer foot may be necessary to reduce bounce. Simply replace one of the carriage bolts holding the pole system or riser in place with the stabilizer foot as shown. You will need a 1/2" box wrench to tighten the hardware. The part number for the stabilizer foot kit is RAM-HAR-VB-ELEV. If you find the foot is not tall enough, a common solution is to purchase a longer 5/16-18 thread carriage bolt and substitute it. These can be found at your local hardware store for very little cost. Thread the nut over the foot then pass the washer down to the nut. Place the foot up through the base from the bottom. Tighten the nut so that it forces the foot down against the floor. Secure with remaining nut and washers on top.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

