

Item Number
RAM-VB-101

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
Chevy S10 (1995-Newer)
S10 Blazer (1995-Newer)
GMC Sonoma (1995-Newer)
Jimmy (1995-Newer)

SPECIFICATIONS

Placement

Passenger side floor board, in front of seat

Drilling Required

None - uses existing seat bolts
Chevy S10 (1995-Newer)
S10 Blazer (1995-Newer)
GMC Sonoma (1995-Newer)
Jimmy (1995-Newer)

Seat Configuration

Bucket

Pole or Pedestal

Sold Separately

Construction/Finish

Steel/Black Powdercoat

Weight

10.7 lbs.

Dimensions

A = 16", B = 6.75", C = 3.75", D = 7.75"
Hole Center = 13.13"

Features

Quick installation with no drilling needed
Angled step moves mount away from passenger leg space
Levers, console, or 4WD shifter not interfered with

Misc.


One Offset Universal Mount Riser is already included with this vehicle base.

Step feature allows optimized placement of mount with a minimal amount of intrusion of passenger leg space.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

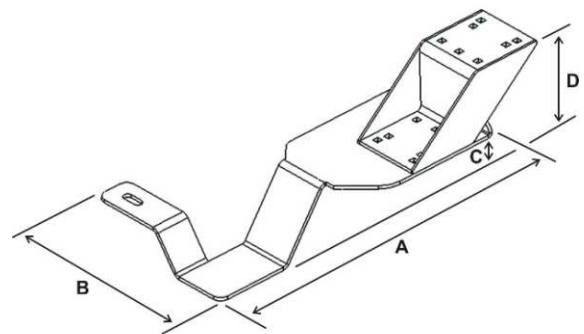

RAM-VB-101, SHOWN WITH
RAM-VB-SB4 RISER (INCLUDED)



Item Number
RAM-VB-101

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
Chevy S10 (1995-Newer)
S10 Blazer (1995-Newer)
GMC Sonoma (1995-Newer)
Jimmy (1995-Newer)

INSTALLATION INSTRUCTIONS

1. Attach the RAM-VB-SB4 riser with 5/16" carriage bolts, flat washer, lock washers, and nuts.
2. Remove the two front seat bolts that connect the passenger seat to the floor.
3. Tilt the front of the passenger seat upward and slide the No-Drill™ base under the seat until the slots in the base line up with the seat bolt holes.
4. Lower the seat back down into position.
5. Install the two front seat bolts.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

