

Item Number
RAM-VB-102

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the

Chevy 2500/3500 (2000-Newer), Chevy Tahoe (2000-2006)
Silverado (1999-Newer), Surburban (2000-Newer)
GMC Yukon (2000-2006), GMC Sierra (2000-Newer)

SPECIFICATIONS

Placement

Passenger side floor board, in front of seat

Drilling Required

None - uses existing seat bolts
Chevy 2500/3500 (2000-Newer)
Chevy Tahoe (2000-2006)
Silverado (1999-Newer)
Surburban (2000-Newer)
GMC Yukon (2000-2006)
GMC Sierra(2000-Newer)

Seat Configuration

Bucket

Pole or Pedestal

Ordered Separately

Construction/Finish

Steel/Black Powdercoat

Weight

6.9 lbs.

Dimensions

A = 16", B = 8", C = 4.69", D = 6.75", E = 4"
Hole Center = 11.75"

Features

Installs in minutes with no drilling required
Won't interfere with levers or factory-installed console or 4WD lever


Misc.

Rock solid construction

Lifetime warranty



Shown In Use

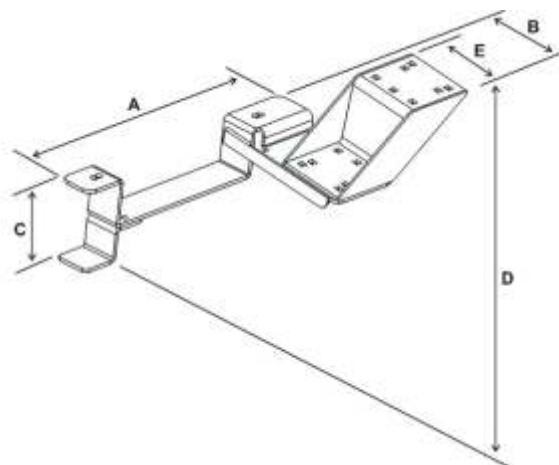

RAM-VB-102, SHOWN WITH
RAM-VB-SB4 RISER (INCLUDED)

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-102

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the

Chevy 2500/3500 (2000-Newer), Chevy Tahoe (2000-2006)
Silverado (1999-Newer), Surburban (2000-Newer)
GMC Yukon (2000-2006), GMC Sierra (2000-Newer)

INSTALLATION INSTRUCTIONS

1. Remove the two front 5/16" hex nuts that hold the passenger side seat cushion to the seat track brackets.
2. Lift the front of the seat cushion off of the front of the the seat track brackets.
3. Position the VB-102 on top of the seat track brackets so the slots in the VB-102 line up with the holes in the seat track brackets.
4. Lower the seat cushion back into place, allowing the studs to pass through the holes in the VB-102 and seat track brackets.
5. Re-attach the two 5/16" hex nuts.

Optional Lever Stop Installation:

1. After mounting the vehicle base under seat, place seat in desired permanent position.
2. Attach the level stop plate onto the main seat base plate with the provided bolts. The lever stop plate should cover the seat lever after installation.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

