

Item Number
RAM-VB-103

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the

Chevy 1500 C/K 2WD, 4WD (1994-1999) Chevy 2500/3500 C/K (1994-2000)
Chevy Blazer Full Size (1993-Older) Chevy Silverado (1998-Older)
Chevy Suburban (1994-1999) Chevy Tahoe (1994-1999)
GMC Yukon 4 Door Only (1994-1999) GMC Sierra (1994-1999)

SPECIFICATIONS

Placement

Across Transmission Hump

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket/Bench

Construction/Finish

Steel/Black Powdercoat

Pole or Pedestal

Ordered Separately

Dimensions

A = 14.5", B = 3.75", C = 5.5",
D = 9.5", E = 6.75"
Hole Center = 23.13"

Weight

6.4 lbs.

Features


Installs in minutes with no drilling required
Over the hump design allows for excellent mount placement

Misc.

Lifetime warranty



Shown In Use

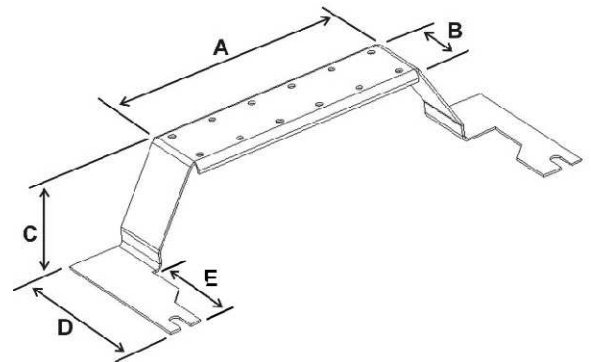

RAM-VB-103

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-103

RAM No-Drill™ Seat Bases


National Products, Inc.

Vehicle base for the

Chevy 1500 C/K 2WD, 4WD (1994-1999) Chevy 2500/3500 C/K (1994-2000)
Chevy Blazer Full Size (1993-Older) Chevy Silverado (1998-Older)
Chevy Suburban (1994-1999) Chevy Tahoe (1994-1999)
GMC Yukon 4 Door Only (1994-1999) GMC Sierra (1994-1999)

INSTALLATION INSTRUCTIONS

1. Place both front seats in their most rear position.
2. Remove the drivers side front right and the passenger side front left seat mounting bolts (inner seat bolts).
3. Slightly lift both the passenger and driver seats and slide the No-Drill™ base between the floor of the vehicle and the bottom of the seat.
4. Align the holes and reinstall all of the seat bolts that have been removed.

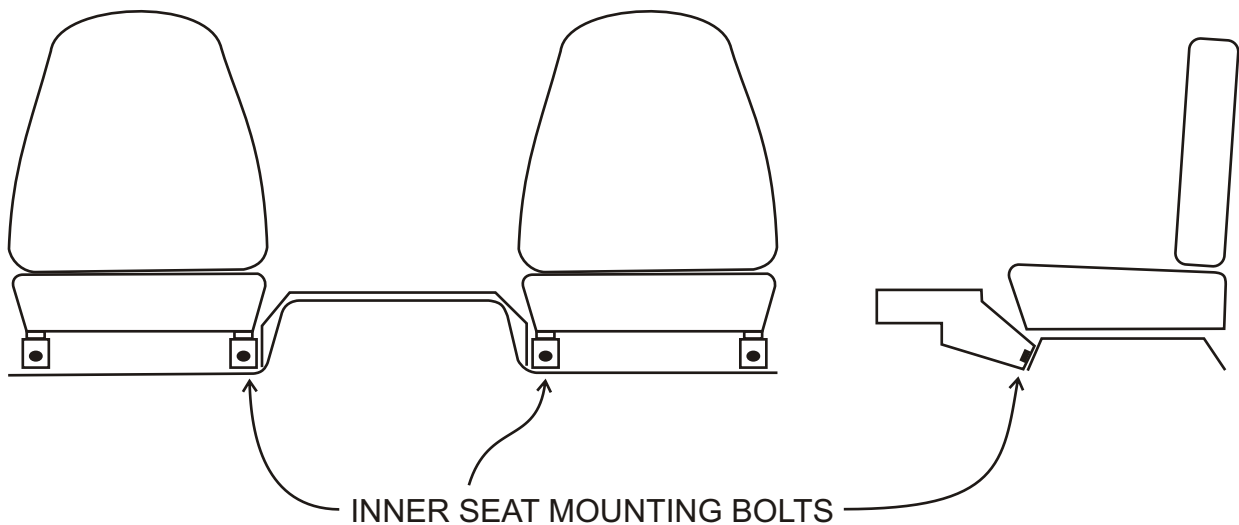

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

