

Item Number
RAM-VB-106

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
Victoria/Police Interceptor (1991-Newer)
Chevrolet Camaro (1993-Newer)
Chevrolet Kodiak (2006-Newer)

SPECIFICATIONS

Placement

Interceptor & Camaro: Passenger side on the floor, under the seat. Kodiak: Driver side on the floor, under right side of seat.

Drilling Required

No - uses existing seat bolts

Pole or Pedestal

Lower tube included with base

Seat Configuration

Bucket/Bench/60-40 split

Weight

6.8 lbs.

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 17.63", B = 8.25", C = 1.13", D = 4"
Hole Center = 10.625" min to 15.875" max

Features


Installs in minutes with no drilling required
Angled step moves pole away from passenger leg space

Misc.

Rugged lifetime warranty construction



Shown In Use

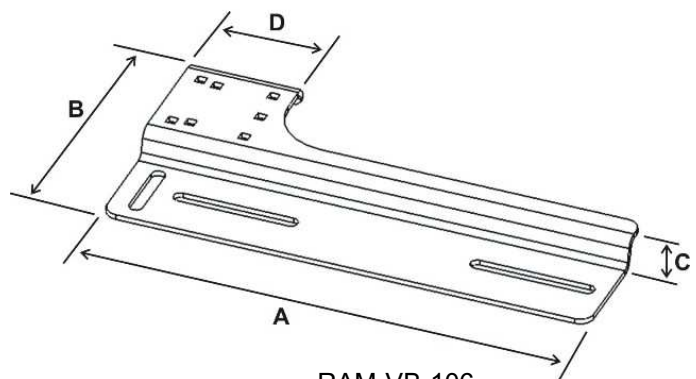

RAM-VB-106

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-106

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the Victoria/Police Interceptor (1991-Newer) Chevrolet Camaro (1993-Newer) Chevrolet Kodiak (2006-Newer)

INSTALLATION INSTRUCTIONS FOR INTERCEPTOR AND CAMARO

1. Move the passenger seat to the rearmost setting.
2. Remove the front seat rail bolts that fasten the passenger seat brackets to the vehicle floor.
3. Without moving the seat, place the base over the front of the seat bracket.
4. Re-install the seat bolts.

INSTALLATION INSTRUCTIONS FOR KODIAK

This base attaches to the drivers seat. There are 4 nuts holding the seat track to the seat frame. The inside front and inside rear nuts will need to be removed and the outside front and outside rear loosened until only a few threads hold them in place.

1. Using a 15MM socket wrench, loosen or remove the nuts mentioned above.
2. Lift the inside of the seat upward so that the seat clears the tips of the seat frame studs.
3. Place the base over the studs using the two slots that pass in the same direction on the No-Drill™ base. Pull the base as far forward toward the dash as the slots will allow.
4. Lower the seat back down over the studs, through the base, and back through the seat frame hole. The base is now seated between the upper seat and lower seat frame.
5. Tighten and reinstall the nuts previously removed.



National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

