

**Item Number**  
RAM-VB-116

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the  
CHEVROLET COLORADO (2004-NEWER)  
GMC CANYON (2004-NEWER)**

## SPECIFICATIONS

### Placement

Passenger side on the floor, in front of seat

### Drilling Required

No - uses existing seat bolts

### Seat Configuration

Bucket/Bench

### Construction/Finish

Steel/Black Powdercoat

### Pole or Pedestal

Ordered Separately

### Dimensions

A = 14", B = 4.75", C = 5.5", D = 17"  
Hole Center = 11.75"

**Weight**  
10.7 lbs.

## Features


Installs in minutes with no drilling required  
Angled step moves pole away from passenger leg space  
Won't interfere with levers or factory-installed console or 4WD lever

## Misc.

The RAM-VB-116 base will not fit crew cab vehicles where the vent duct passes under the front of the passenger seat.



Shown In Use

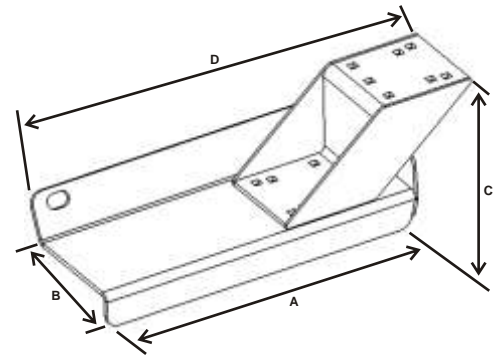

RAM-VB-116, SHOWN WITH  
RAM-VB-SB4 RISER (INCLUDED)

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-116

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
**CHEVROLET COLORADO (2004-NEWER)**  
**GMC CANYON (2004-NEWER)**

## INSTALLATION INSTRUCTIONS

1. Move the passenger seat to the rearmost setting.
2. Remove the front seat rail bolts that fasten the passenger seat brackets to the vehicle floor.
3. Without moving the seat, place the base over the front of the seat bracket.
4. Re-install the seat bolts.
5. Attach the RAM-VB-SB4 riser to base with the provided carriage bolts, washers, and nuts.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

