

Item Number
RAM-VB-116A

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the CHEVROLET COLORADO CREW CAB (2004-NEWER) GMC CANYON CREW CAB (2004-NEWER)

SPECIFICATIONS

Placement

Passenger side on the floor, in front of seat where seat frame legs meet the floor board.

Drilling Required

No - uses existing seat bolt holes and provided stand off's and longer bolts.

Seat Configuration

Bucket/Bench

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 14", B = 4.75", C = 5.5", D = 8.5"

Hole Center = 11.75"

Tools required for base installation

18mm box end wrench, 18mm socket, universal joint adaptor or wobble, and socket wrench for base installation. Tools for complete system assembly: pliers, phillips screw driver, #10, 1/2", 9/16" box end wrench's.


Pole or Pedestal

Ordered Separately

Weight

8.9 lbs.

Complete system
shown in use

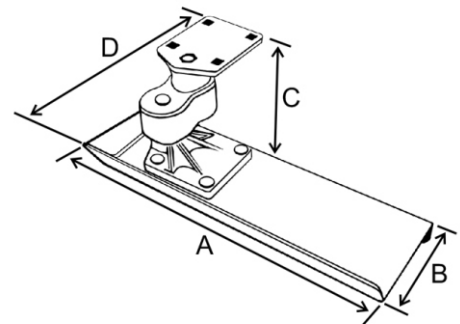

Features

Installs in minutes with no drilling required

Adjustable riser moves pole away from passenger leg space

Won't interfere with levers or factory-installed console or 4WD lever

Important Note

The RAM-VB-116A must be used with its included hardware to clear the under seat air duct. The standard RAM-VB-116 WILL NOT install into the crew cab models of this vehicle.

RAM-VB-116, SHOWN WITH
RAM-VB-SB4 RISER. RAM-116A
INCLUDES ADJUSTABLE RISER.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-116A

RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the
CHEVROLET COLORADO CREW CAB MODEL (2004-NEWER)
GMC CANYON CREW CAB MODEL(2004-NEWER)**

INSTALLATION INSTRUCTIONS

Tools required for installation are an 18mm socket, 19mm socket, and 2 qty ½" box end wrench. You may also consider using a wobble adapter or universal joint style extension to aid in the installation of the hump side seat leg bolt.

1. Attach the adjustable riser to base with the provided carriage bolts, washers, and nuts. Use the ½" box end wrench to fully tighten riser to base.
2. Move the passenger seat to the rearmost setting.
3. Remove the front seat rail bolts that fasten the passenger seat brackets to the vehicle floor using the 18mm socket.
4. Place the flat washers over the longer seat leg bolts provided in the kit.
5. Pass the bolts through the holes in the no drill base.
6. Place the stand off over the holes in the seat frame legs and floor board. These sit over the frame legs, not under them.
7. Place the base with bolt through the stand offs, through the seat frame legs, and start the thread by hand into the floorboard.
8. Once both bolts have been started by hand, use the 19mm socket wrench and fully tighten to 35 ft lbs.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

