

**Item Number**  
RAM-VB-119

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the Ford Econoline Van (1995-Newer)

### SPECIFICATIONS

#### Placement

Attaches to the passenger side inner front and back seat studs

#### Drilling Required

No - uses existing seat bolts

#### Seat Configuration

Bucket/Bench

#### Pole or Pedestal

Included on base

#### Construction/Finish

Steel/Black Powdercoat

#### Weight

10.5 lbs.

#### Dimensions

A = 16.75", B = 8.25", C = 18.75"

Hole Center = 13.5"

### Features


Installs in minutes with no drilling required

### Misc.

Rugged Steel Construction  
Lifetime warranty



Shown In Use

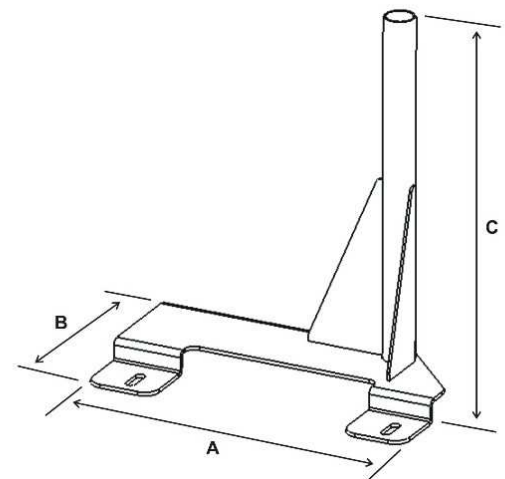

RAM-VB-119

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-119

**RAM No-Drill™ Seat Bases**  
National Products, Inc.

**Vehicle base for the**  
**Ford Econoline Van (1995-Newer)**

**INSTALLATION INSTRUCTIONS**

1. Remove the seat bolts that hold the right side of the drivers seat to the floor.
2. Place mounting base next to the right side of the drivers seat.
3. Without moving seat, place mounting legs under seat bracket and reinstall seat bolts.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

