

Item Number
RAM-VB-129

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
DODGE SPRINTER VAN (2007-NEWER)
DODGE MAGNUM (2005)
DODGE CHARGER (2005)

SPECIFICATIONS

Placement

Passenger side on horizontal section of seat rail. For Sprinter, between seat cushion and seat frame box passenger side front of seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 19.375" B = 7.125"

Hole Center = 16.5"

Pole or Pedestal

Purchased Separatel

Weight = 4.9 lbs.

Features

Installs with no drilling required
Minimal intrusion into passenger leg space


Important Note

In 2005 model year vehicles, the seat leg bolts may be tied to the air bag system. Tampering with these may result in disabling the air bag system and causing a severe safety hazard. The installation of this product into a 2005 vehicle should only be done by a Dodge factory authorized technician or Up-fitter familiar with Police, Fire, and Rescue vehicles and their fleet use.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

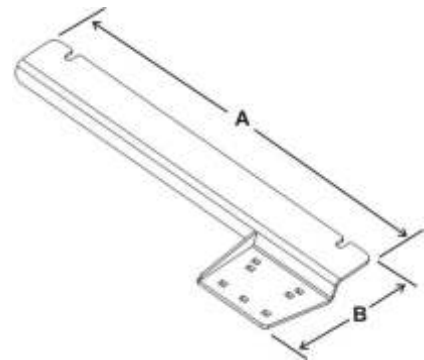

RAM-VB-129



Item Number
RAM-VB-129

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
DODGE SPRINTER VAN (2007-NEWER)
DODGE MAGNUM (2005)
DODGE CHARGER (2005)

INSTALLATION INSTRUCTIONS

Charger and Magnum instructions:

1. Loosen the front bolts that hold the seat cushion to the slides. The bolts only need to be loosened enough to so the mount can be slid between the cushion and the slides.
2. Slide the mount between the cushion and the slides and re-tighten the bolts.
3. Move the seat back to the rear most position.

Sprinter instructions:

1. Locate and loosen the two rear seat nuts holding the rear seat tracks to the seat frame.
2. Locate and remove the two nuts holding the seat track to the seat frame at the front of the seat.
3. Gently lift the front of the seat and place the no drill base over the seat frame studs. Align the tow holes, NOT THE SLOTS, with the seat frame studs.
4. Lower the seat back over the studs, replace the nuts. Tighten all four nuts holding the seat in place.



National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

