

Item Number
RAM-VB-141

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the Jeep Liberty (2003-Newer)

SPECIFICATIONS

Placement

Passenger side, front, where seat rail frame attaches to floor board.

Drilling Required

No - uses existing seat bolts
Jeep Liberty (2003-Newer)

Seat Configuration
Bucket

Pole or Pedestal
Sold Separately

Construction/Finish
Steel/Black Powdercoat

Weight
4.9 lbs.

Dimensions

A = 12.75", B = 8", C = 5.25"
Hole Centers = 11"

Features

Installs in minutes with no drilling required
Low profile keeps mount away from passenger leg space


Misc.

Rock solid construction

Lifetime warranty



Shown In Use

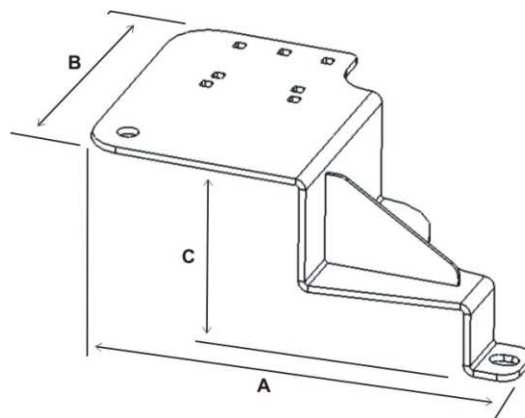

RAM-VB-141

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Item Number
RAM-VB-141

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the Jeep Liberty (2003-Newer)

INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame
3. Align the holes in the metal base with those in the seat frame and floor board.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

