

**Item Number**  
RAM-VB-171

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the **TOYOTA PRIUS (2007-NEWER)**

### SPECIFICATIONS

#### Placement

Passenger side on the floor, under front seat

#### Drilling Required

No - uses existing seat bolts

#### Seat Configuration

Bucket

#### Pole or Pedestal

Sold Separately

#### Construction/Finish

Steel/Black Powdercoat

#### Weight

N/A

#### Dimensions

A = 18", B = 7", C = 2.85"

Hole Center = 15.44"



Shown In Use

### Features


Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space

### Misc.

Rock solid construction

Lifetime warranty

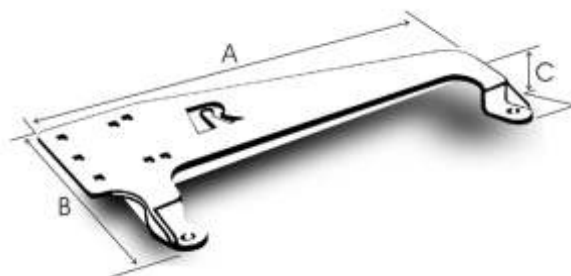

RAM-VB-171

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-171

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the **TOYOTA PRIUS (2007-NEWER)**

### INSTALLATION INSTRUCTIONS

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts using a 14MM wrench..
2. Without moving the seat, place the No-Drill™ base over the front of the seat bracket.
3. Align the holes in the No-Drill base with the holes in the seat frame legs.
4. Pass the seat bolts through the holes and start the threads by hand.
5. Once bolt has begun to thread into the hole, use the 14MM wrench for fully re-tighten the seat bolts.
6. After about a week of use, check seat bolts and re-tighten if necessary.



National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

