

**Item Number**  
RAM-VB-172

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the FORD EDGE (2007-NEWER)

### SPECIFICATIONS

#### Placement

Passenger side, in front, where seat frame meets floor board.

#### Drilling Required

None - uses existing seat bolts

#### Seat Configuration

Bucket

#### Pole or Pedestal

Ordered Separately

#### Construction/Finish

Steel/Black Powdercoat

#### Weight

N/A

#### Dimensions

A = 18.23", B = 7", C = 1.95",  
Hole Center = 16.31"




Shown In Use

### Features

Installs in minutes with no drilling required. Placement is over the top of the seat frame legs at floor board level.

### Misc.

Rock solid construction  
Lifetime warranty

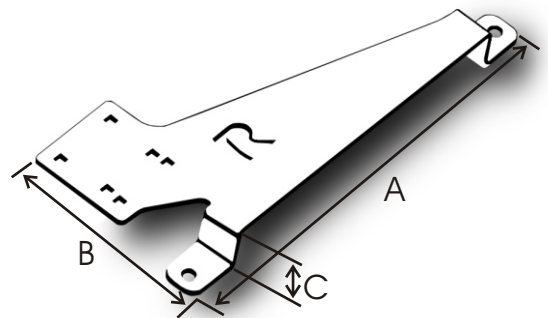

RAM-VB-172

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



**Item Number**  
RAM-VB-172

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the FORD EDGE (2007-NEWER)

### INSTALLATION INSTRUCTIONS

Depending on your make and model, there may be pieces of plastic trim that cover the lower front of the seat frame legs. This will need to be removed and stored. If you wish to reinstall this piece of trim, you will have to modify it to fit over the stamped metal base.

1. Move the passenger side seat to its rearmost position. Using an 18MM wrench, loosen and remove the two bolts holding the seat frame legs to the floor board.
2. Place the no drill base over the seat frame legs with the pedestal platform near the center of the vehicle.
3. Re-install the two seat frame bolts. Start the thread by hand and then fully tighten with the 18MM wrench.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

