

Item Number
RAM-VB-146

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the
Dodge Caravan (2005-Newer)
Chevrolet Uplander (2006-Newer)
Saturn Relay (2005-Newer)
Pontiac Montana SV6 (2005-Newer)

SPECIFICATIONS

Placement

Passenger side floor board, in front of seat.

Drilling Required

No - uses existing seat bolts

Pole or Pedestal

Sold Separately

Seat Configuration

Bucket

Weight 8.2 lbs.

Construction/Finish

Steel/Black Powdercoat

RAM®ADJUST-A-POLE™
Included With Base Patented

Dimensions

A = 17.625", B = 13", C = 5.25", D = 3.5"
Hole Center = 10.625" min to 15.875" max

Features

Installs in minutes with no drilling required


Misc.

The RAM-VB-146 base will not fit the Dodge Caravan with Power Seats.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com



Shown In Use

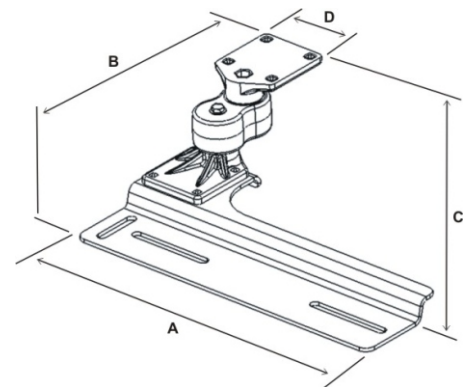

RAM-VB-146



Item Number

RAM-VB-146

RAM No-Drill™ Seat Bases

National Products, Inc.

Vehicle base for the

Dodge Caravan (2005-Newer)

Chevrolet Uplander (2006-Newer)

Saturn Relay (2005-Newer)

Pontiac Montana SV6 (2005-Newer)

INSTALLATION INSTRUCTIONS FOR THE DODGE CARAVAN

1. Remove the two nuts that hold the seat rail track to the seat frame. These are located on the lefthand side, underneath the seat. Remove metal framework of chair skirt
2. Place the custom metal base over the mounting bolts that hold the seat track to the seat frame, tube facing up.
3. While holding the metal base in place, replace metal skirt frame and put the nuts back onto the seat track bolts and tighten.

INSTALLATION INSTRUCTIONS FOR THE CHEVROLET UPLANDER

For your vehicle base installation you will need a 15MM and 18mm socket wrench.

1. Assemble the No-Drill™ seat rail base and Adjust-A-Pole™ and set aside.
2. Remove the two nuts holding the front seat frame rails to the floor board. These are located where the seat frame meets the floor board. These nuts require the 15MM socket. Once removed, move the seat to its most forward position.
3. Go to the rear of the seat and using the 18MM socket, remove the nuts holding the seat frame to the floor board at the back of the seat. Seat may want to tip backwards so use caution.
4. Go back to front of seat and lift the seat gently upward off of the floor mounted studs that pass through the seat frame.
5. Take the No-Drill™ base and Adjust-A-Pole™ assembly and place in between the seat frame legs and the floor board. On the left hand side of the seat, use the slot that passes front to back for the inner most seat rail stud. On the right side, place the slot over the seat stud.
6. Once the base is over the top of both seat studs, pull the base to the most forward position possible so as not to crush the air duct under the carpet. The base will not be perfectly square due to vehicle parts passing under the carpet. The Adjust-A-Pole™ will account for this once the base is fully installed.
7. You will notice a loom of wires passing out of the carpet to the underside of the passenger seat. There is a small indentation for these wires. It is important to make sure these wires are as close to, or within this indentation as possible so that they are not pinched between the base and floor board.
8. Now that the base is pulled forward and the wires are safe, lower the front of the seat back down over the seat studs. Make sure the seat studs are passing through the rear seat legs prior to starting the nuts. You may need to put a small amount of downward force on the seat to start them. Retighten the nuts.
9. Now move the seat as far forward as the seat rail base will allow.
10. Go to rear of seat and replace and tighten the seat nuts removed at step 3.
11. Move seat back to a comfortable position.

National Products, Inc.
Phone: 206-763-8361
Fax: 206-763-9615
Address: 1205 S Orr St
Seattle, WA 98108
Website: www.ram-mount.com
Email: staff@ram-mount.com

